

What if I forgot the password of my router?

If you can no longer remember the password from the router you need to reset the router. All factory settings will be restored, keep in mind that you will have to reconfigure the router for your internet provider.

Older models: Have only a reset button.



Here you need to hold the reset button for around 10 seconds. When the reset is complete the power light will go out or start blinking.

New models: Have a WPS / reset button.



Here you need hold the reset button for 20-30 seconds. When the reset is complete the power light will go out or start blinking.

Please wait until the router has restarted again, this can take up to 1 minute. Then you can login again with the default username and password.

Username: **admin**

Password: **1234**