



Frequently Asked Questions

Instruction on how to use AR-7024/AR-7024WG for Annex A/B

By default setting, AR-7024A/AR-7024WGA works for Annex A and AR-7024B/AR-7024WGB works for Annex B. But after some special settings in the configuration menu, you would be able to use AR-7024A/AR-7024WGA for Annex B and AR-7024B/AR-7024WGB for Annex A.

Below we outline the steps to make these two cases work. Case I: how to make AR-7024A/AR-7024WGA work for Annex B. Case II: how to make AR-7024B/AR-7024WGB work for Annex A.

Case I: how to make AR-7024A/AR-7024WGA work for Annex B.

1. Login the setup menu. Go to *ADSL configuration -> ADSL advanced setting*.
2. For *Annex Mode Configuration*, please select "User Selected".
3. For *User Selected Annex Mode*, please select "Annex B".
4. Please follow the manual or QIG to configure your account for your ISP. In this step, pay special attention on VPI and VCI setting and make sure you fill in the correct values by consulting your ISP or the instruction about this from <http://www.edimax.nl/html/english/products/AR-7024Wg.htm>. your account and password from your ISP

Case II: how to make AR-7024B/AR-7024WGB work for Annex A.

1. Login the setup menu. Go to *ADSL configuration -> ADSL advanced setting*.
2. For *Annex Mode Configuration*, please select "User Selected".
3. For *User Selected Annex Mode*, please select "Annex A".
4. Please follow the manual or QIG to configure your account for your ISP. In this step, pay special attention on VPI and VCI setting and make sure you fill in the correct values by consulting your ISP or the instruction about this from <http://www.edimax.nl/html/english/products/AR-7024Wg.htm>. your account and password from your ISP

If you have any questions, please send email to support@edimax.nl

Created : 05/03/2008
Author : Edimax EU

